




BURLINGTON PULL HANDLES - BACK TO BACK

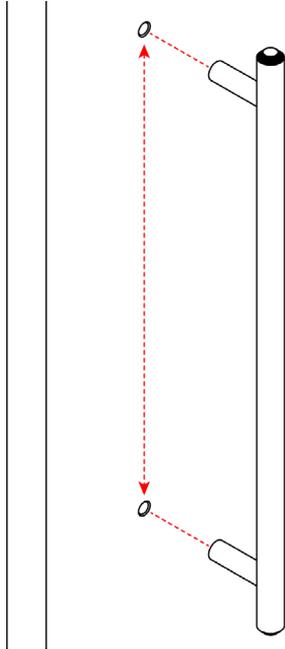


1. Drill holes to the appropriate size, in the position required and counter sink.

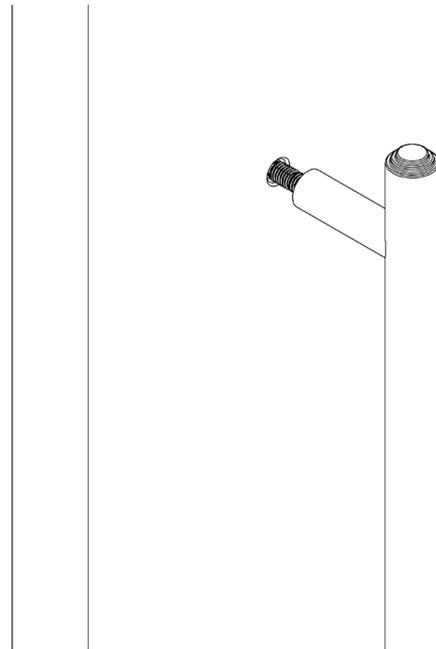

2. Push the back to back bolts through the newly drilled holes, and screw into the pull handle.

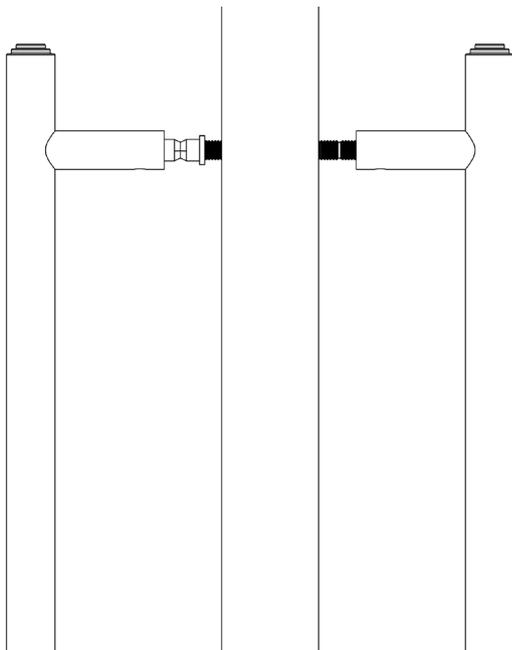

3. Place the other pull handle on the opposite side of the door, over the brass head of the bolt. You may need to loosen the grub screws first.

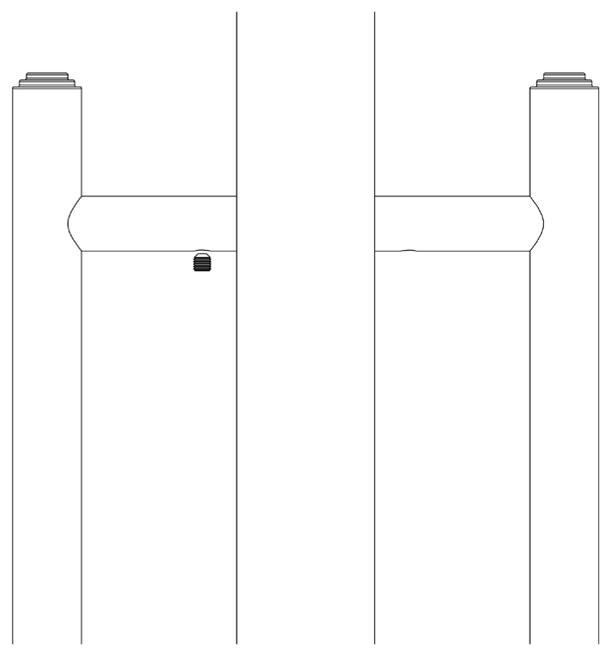

4. Now the pull handle is in the back to back position, tighten the grub screw top and bottom to the brass head.

Note: When applying to a glass door, ensure white plastic sleeve is used